

EPSON EB-1420Wi/EB-1430Wi and EB-595Wi PC Free Whiteboard Mode

This document provides a brief overview of the PC Free Whiteboard mode of the EPSON EB-1420Wi/EB-1430Wi and EB-595Wi model interactive projectors.









Ico	n (function)	Description
A	∞ %	Activate/Disable Whiteboard Sharing: enables the whiteboard to be shared with up to 15 devices on the same network. When shared, PCs and Tablets on the network can access the whiteboard via their respective web browsers.
В		Save the current whiteboard session; or clear current session (completely delete all content) and begin new session.
С		Open a compatible document from a network drive, or a USB thumb drive attached to the projector. The following file types can be loaded onto the whiteboard: PDF, PNG and EWF (Epson Whiteboard Format).
D		Scan documents from an Epson scanner connected via USB or Ethernet (only guaranteed to work with certain Epson multifunction models which have on-board scanners. Will not work with standalone Epson scanners or third party scanners).
E		Select a custom background template (includes 5 pre-loaded templates as well as provision for 5 user-customisable templates).
F		Slide options (i.e. add slides, delete slides, duplicate slides, etc.)
G		Print whiteboard content to a printer connected via USB (EPSON only) or PCL6 compatible printer connected via Ethernet (guaranteed to work with EPSON PCL6 compatible printers. Operability with non-EPSON printers not guaranteed).
Н		Save whiteboard contents on to a USB thumb drive or network folder.
1		Transmit the whiteboard contents via email to selected recipients (in either PDF, PNG or EWF formats).
J	→	Display a list of image input sources.
K	(Reduce or enlarge displayed content.



